

GEN 2.4 LOCATION INDICATORS

1. ENCODE

LOCATION	INDICATOR	LOCATION	INDICATOR
PENINSULAR MALAYSIA	WM	SARAWAK	WBG
ALOR STAR/SULTAN ABDUL HALIM	WMKA	BAKELALAN	* WBGQ
BAHAU	* WMAA	BARIO	* WBGZ
BATU PAHAT	* WMAB	BELAGA	* WBGK
BENTA	* WMAC	BINTULU	WGBB
BENTONG	* WMAD	KAPIT	* WBGK
BIDOR	* WMAE	KUCHING/INTL	WBGK
BUTTERWORTH (RMAF)	WMKB	LAWAS	* WBGW
GONG KEDAK (RMAF)	WMGK	LIMBANG	* WBGJ
GRIK (RMAF)	WMAH	LONG BANGA	NIL
IPOH/SULTAN AZLAN SHAH	WMKI	LONG LELLANG	* WBGF
JENDERATA	* WMAJ	LONG SEMADO	* WBGD
JOHOR BAHRU/SULTAN ISMAIL	WMKJ	LONG SERIDAN	* WBGK
JUGRA	* WMBJ	MARUDI	* WBGK
KERTEH (PETRONAS)	WMKE	MIRI	WBGR
KLUANG (RMAF)	WMAK	MUKAH	* WBGK
KONG KONG	* WMAO	MULU	* WBMU
KOTA BHARU/SULTAN ISMAIL PETRA	WMKC	SIBU	WBGK
KUALA LUMPUR (ACC/FIC)	WMFC	TANJUNG MANIS	* WBTM
KUALA LUMPUR (RMAF)	WMKS	Collective address for all Sarawak	* WBGX
KUALA TERENGGANU/SULTAN MAHMUD	WMKN		
KUANTAN (RMAF)	WMKD		
KROH (RMAF)	* WMBH		
LABIS	* WMAQ		
MALACCA	WMKM	SABAH	WBK
MERSING	* WMAU	KOTA KINABALU (ACC/FIC)	WBFC
MUAR	* WMAV	KENINGAU	* WBKG
PENANG/INTL	WMKP	KOTA KINABALU/INTL	WBKK
PULAU LANGKAWI/INTL	WMKL	KOTA BELUD	* WBKB
PULAU PANGKOR	WMPA	KULA PENYU	* WBKU
PULAU REDANG	* WMPR	KUDAT	* WBKT
PULAU TIOMAN	* WMBT	LABUAN (RMAF)	WBKL
SEGAMAT	* WMAZ	LAHAD DATU	WBKD
SEPANG/KL INTERNATIONAL AIRPORT	WMKK	LONG PASIA	* WBKN
SIMPANG (RMAF)	WMKF	PAMOL	* WBKP
SITIAWAN	* WMBA	RANAU	* WBKR
SUBANG/SULTAN ABDUL AZIZ SHAH	WMSA	SAHABAT	* WBKH
SUNGEI PETANI	* WMBB	SANDAKAN	WBKS
SUNGAI TIANG	* WMAN	SEMPORNA	* WBKA
TAIPING (RMAF)	* WMBI	SEPULUT	* WBKO
TEMERLOH	* WMBE	TAWAU	WBKW
ULU BERNAM	* WMBF	TELUPID	* WBKE
LUMUT (RMN)	* WMLH	TOMMANGGONG	* WBKM
Collective address for all Peninsular Malaysia Military Aeronautical Stations.	WMKQ	Collective address for all Sabah Aeronautical Telecommunication Stations.	WBKX
Collective address for all Peninsular Malaysia Civil Aeronautical Telecommunication Stations.	WMKX		

* The location Indicators marked with asterisk (*) cannot be used in the address component of AFS messages

2. DECODE

INDICATOR	LOCATION	INDICATOR	LOCATION
WM	PENINSULAR MALAYSIA	WBG	SARAWAK
* WMAA	BAHAU	WBGB	BINTULU
* WMAB	BATU PAHAT	* WBGC	BELAGA
* WMAC	BENTA	* WBGD	LONG SEMADO
* WMAD	BENTONG	* WBGF	LONG LELLANG
* WMAE	BIDOR	WBGG	KUCHING/INTL
* WMAH	GRIK (RMAF)	* WBGI	LONG SERIDAN
* WMAJ	JENDERATA	* WBGJ	LIMBANG
* WMAN	SUNGAI TIANG	* WBGK	MUKAH
* WMAO	KONG KONG	* WBGM	MARUDI
WMAP	KLUANG (RMAF)	* WGBP	KAPIT
* WMAQ	LABIS	* WBGQ	BAKELALAN
* WMAU	MERSING	WBGR	MIRI
* WMAV	MUAR	WBGs	SIBU
* WMAZ	SEGAMAT	* WBGW	LAWAS
* WMBA	SITIAWAN	* WBGZ	BARIO
* WMBB	SUNGEI PETANI	NIL	LONG BANGA
* WMBE	TEMERLOH	* WBMU	MULU
* WMBF	ULU BERNAM	* WBTM	TANJUNG MANIS
* WMBH	KROH (RMAF)	WBGX	Collective address for all Sarawak Aeronautical Telecommunication Stations.
* WMBI	TAIPING (RMAF)		
* WMBJ	JUGRA	WBK	SABAH
* WMBT	PULAU TIOMAN	WBFC	KOTA KINABALU (ACC/FIC)
WMFC	KUALA LUMPUR (ACC/FIC)	* WBKA	SEMPORNA
WMGK	GONG KEDAK (RMAF)	* WBKB	KOTA BELUD
WMKA	ALOR STAR/SULTAN ABDUL HALIM	WBKD	LAHAD DATU
WMKB	BUTTERWORTH (RMAF)	* WBKE	TELUPID
WMKC	KOTA BHARU/SULTAN ISMAIL PETRA	* WBKG	KENINGAU
WMKD	KUANTAN (RMAF)	* WBKH	SAHABAT
WMKE	KERTEH (PETRONAS)	WBKK	KOTA KINABALU/INTL
WMKF	SIMPANG (RMAF)	WBKL	LABUAN (RMAF)
WMKI	IPOH/SULTAN AZLAN SHAH	* WBKM	TOMMANGGONG
WMKJ	JOHOR BAHRU/SULTAN ISMAIL	* WBKN	LONG PASIA
WMKK	SEPANG/KL INTERNATIONAL AIRPORT	* WBKO	SEPULUT
WMKL	PULAU LANGKAWI/INTL	* WBKP	PAMOL
WMKM	MALACCA	* WBKR	RANAU
WMKN	KUALA TERENGGANU/SULTAN MAHMUD	WBKS	SANDAKAN
WMKP	PENANG/INTL	* WBKT	KUDAT
WMKS	KUALA LUMPUR (RMAF)	* WBKU	KULA PENYU
WMLH	LUMUT (RMN)	WBKW	TAWAU
WMKQ	Collective address for all Peninsular Malaysia Military Aeronautical Stations.	WBKX	Collective address for all Sabah Aeronautical Telecommunication Stations.
WMKX	Collective address for all Peninsular Malaysia Civil Aeronautical Telecommunication Stations.		
WMPA	PULAU PANGKOR		
* WMPR	PULAU REDANG		
WMSA	SUBANG/SULTAN ABDUL AZIZ SHAH		

* The location Indicators marked with asterisk (*) cannot be used in the address component of AFS messages