


OVERHEAD HOLDING AREAS (VOR & LOCATOR) & VOR/DME HOLDING AREAS

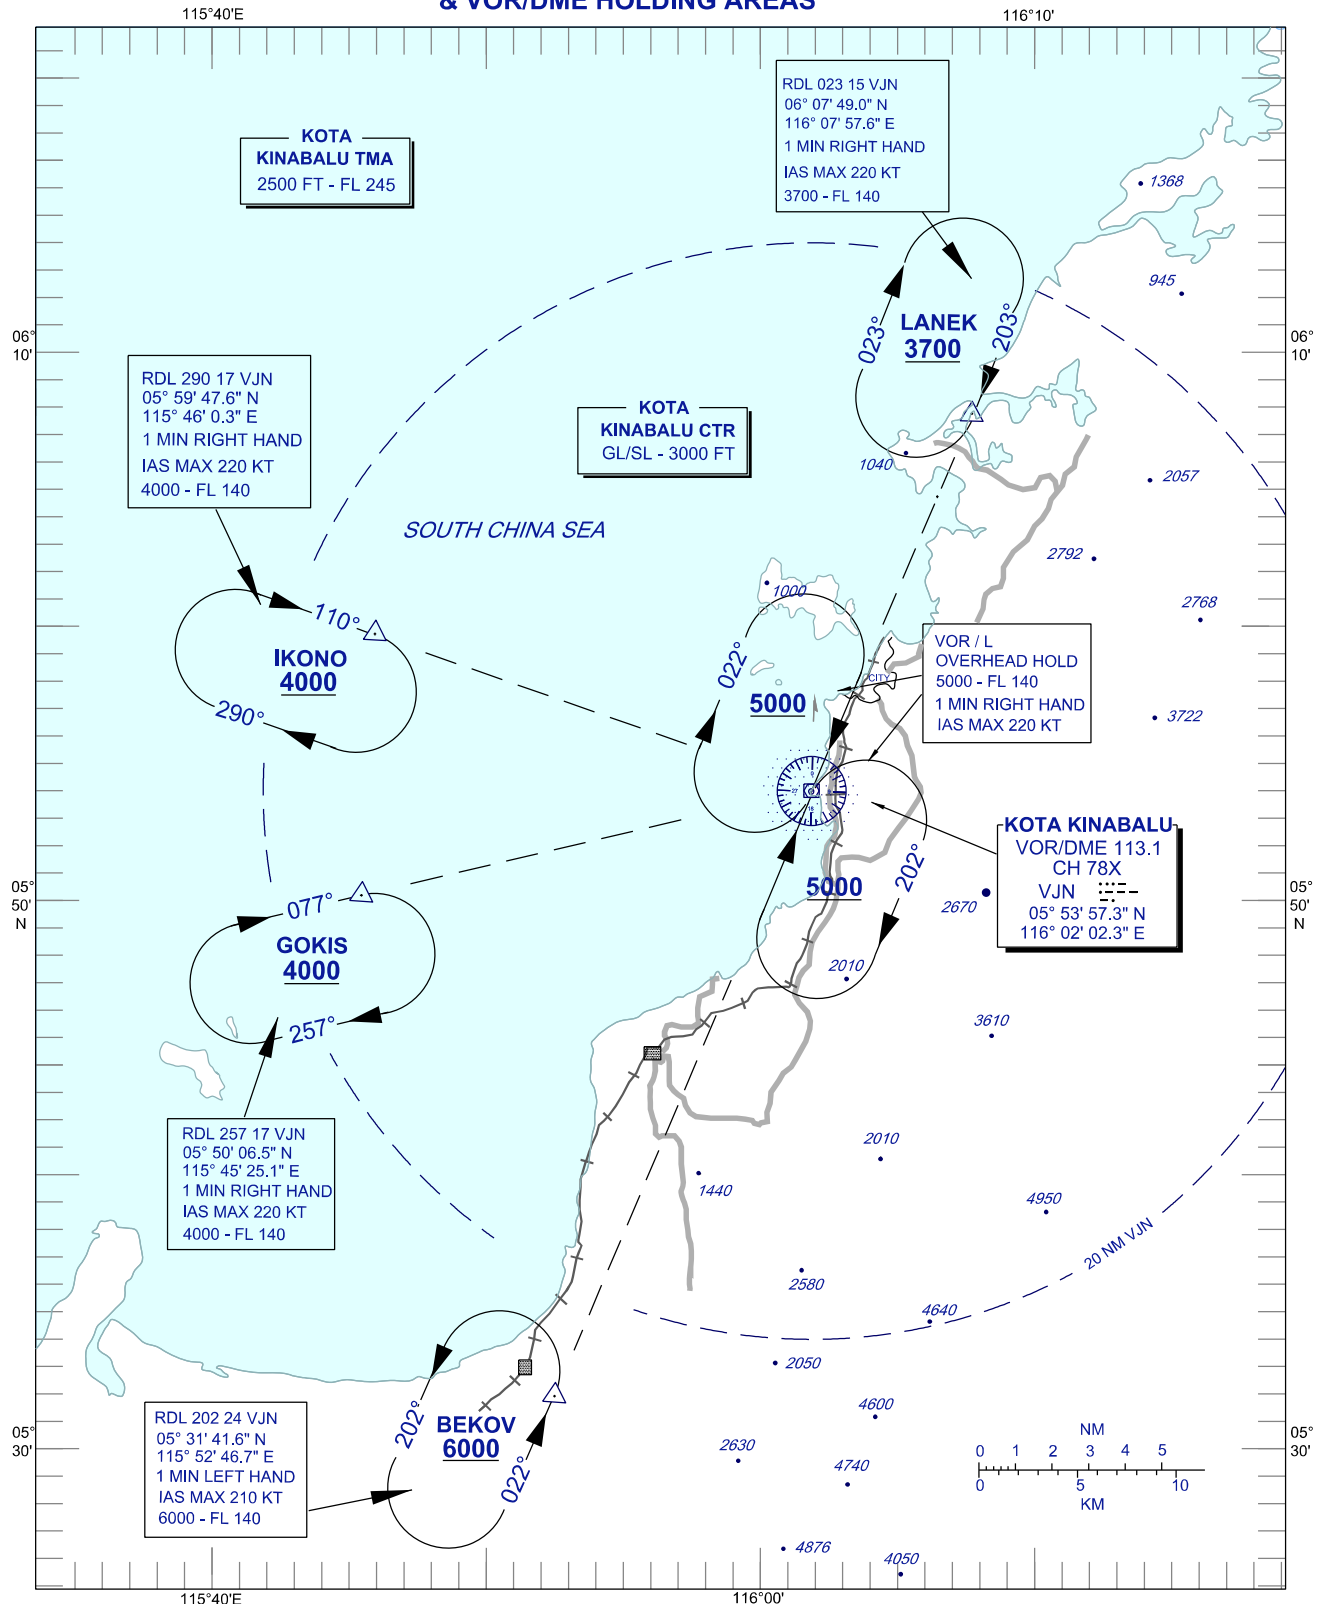

CHANGES : REMOVE NDB JSL.